



America Sales

Planar Systems, Inc.
1195 NW Compton Drive
Beaverton, OR 97006-1992 USA

phone + 1 (503) 748-1100
fax + 1 (503) 748-1493

Medical Sales

Planar Systems, Inc.
400 Fifth Avenue
Waltham, MA 02451-8738 USA

phone + 1 (781) 895-1155
fax + 1 (781) 895-1133

Europe & Asia-Pacific Sales

European Representative
Planar Systems, Inc.
Olarinluoma 9, P.O. Box 46
FIN-02201 Espoo, Finland

phone + 358 9 420 01
fax + 358 9 420 0200

Customer Support

- Visit www.planar.com
- E-mail medicalsupport@planar.com
- Call (866) PLANAR1

Copyright © 2005 Planar Systems, Inc. Planar, the Planar logo, and Dome Dashboard are either registered trademarks or trademarks of Planar Systems, Inc.

020-0368-00A



Dome Dashboard™

Display management made easy

Version 1.0

System Requirements

- PC with Pentium III 1 GHz or higher processor
- Microsoft Windows XP or Windows 2000, running SNMP Service
- Microsoft .NET Framework Version 1.1
- 512 MB of RAM
- 512 MB of hard disk space
- SNMP and TCP/IP network protocol
- CD-ROM drive
- Planar display, one or more of the following:
 - Dome CX (C2, C3, C3i, C5, C5i)
 - Dome QX (Q2)
 - Planar PX display (PX171M, PX191, PX212M)
 - Dome PX Bundle
- Dome CXtra software, per display
 - Dome CX Edition v3.0 and later
 - Dome QX Edition v1.0 and later
 - Dome Desktop Edition v1.1 and later

To Install the application

- 1 Insert the Dome Dashboard CD in your CD-ROM drive.
- 2 Click Next on the Welcome screen.
- 3 Enter your user name, company name, and software license number. Click Next.
- 4 Click Yes to accept the licensing agreement. Selecting No closes the Install Wizard.
- 5 Choose a destination location. Click Next. Default location: c:\ProgramFile\Planar\DomeDashboard\.
- 6 Click the selection box to view the ReadMe.txt file. Click Finish.


To launch the application

- Double-click the shortcut icon on the Windows desktop.
- Open the Start menu. Select Dome Dashboard.
- Open the executable at the destination location.

To start online Help

Choose Help > Dome Dashboard Help.

Dome Dashboard toolbar

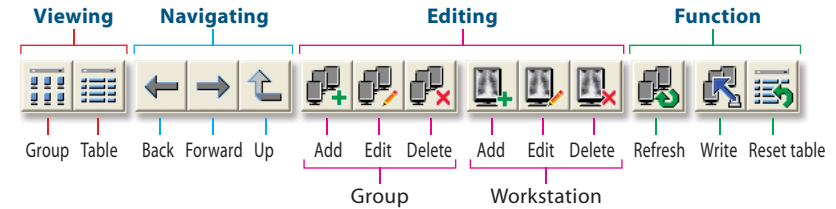

Dome Dashboard window

- 1 Menu bar
- 2 Toolbar
- 3 Selection box
- 4 Navigation panel
- 5 Main panel
- 6 Autosize columns of Main panel
- 7 Search box
- 8 Event Log panel
- 9 Autosize columns of Event Log panel
- 10 Status bar

